


### Specifications:

- Each cluster contains six (6) relay modules that can easily be separated.
- 12VDC or 24VDC selectable operation.
- Current draw 50mA.
- 10A/120VAC or 28VDC SPDT contacts.
- Screw terminals accommodate up to 12 gauge wire.

Board dimensions: (L x W x H): 2" x 1.6" x 0.75" (50.8mm x 40.6mm x 19.05mm).

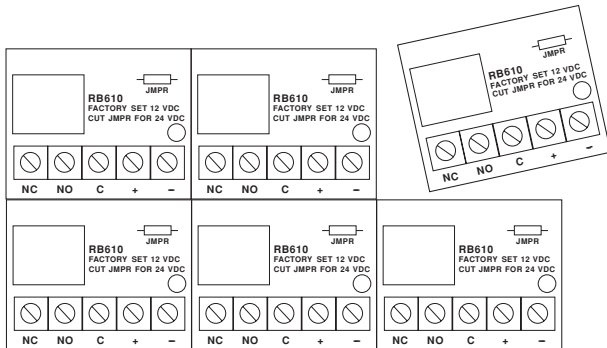

### Installation Instructions:

1. In order to break the relay cluster apart (if desired), put a pencil on a flat surface, position the scoring line on top of the pencil and push lightly. Relay should easily break away from cluster.
2. Connect trigger input or voltage source to screw terminals marked [POS (+) & NEG (-)]. (Unit is factory set for 12VDC operation - cut jumper for 24VDC operation).
3. Connect screw terminals marked [NC] (Normally Closed) or [NO] (Normally Open) and [C] (Common)] to operate desired devices.

Altronix is not responsible for any typographical errors. Product specifications are subject to change without notice.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056

website: [www.altronix.com](http://www.altronix.com) | e-mail: [info@altronix.com](mailto:info@altronix.com) | Lifetime Warranty

IIRB610 - Rev. 012907

F21U