

ENFORCER®

Voice Dialer

E-922CPQ

Installation Manual



When triggered, the ENFORCER Voice Dialer can dial up to 6 numbers (14 digits) delivering an 18-second message, the last 6 seconds customized for the particular trigger input (of 3 total inputs). The receiver can listen in, stop dialing, or trigger an external device such as a door lock, siren, strobe, etc. The user can listen in by remote call in and trigger or turn off the auxiliary relay.

- Trigger-activated dialer with user-recorded 18-second alarm message
- The last 6 seconds of the alarm message is individually customizable for each input
- 3 Trigger inputs and 1 inhibit input, each programmable high (input >3.5V) or low (input <1V)
- 1 Auxiliary relay output, NO/NC programmable for 1~255 seconds
- Works as a stand-alone unit or connected to a security system
- LCD display indicates status, either "ready" or "alarm" showing which input and number dialed
- Listen in, stop the dialing process, and/or turn the auxiliary output on or off during dialer call out
- Call in at any time to listen in to room and/or turn the auxiliary output on or off
- 6 Programmable alarm telephone numbers (up to 14 digits each)
- Programmable autodialing to call each number three times or call a single number
- Built-in flash memory to protect against system data loss in case of power failure
- Tone or pulse dialing

NOTE: For single-line analog or VOIP systems. May work with some digital phone systems (single-line or PBX) depending on the system

Table of Contents

Parts List	2	Setting the Dialer "Beep" Volume	8-9
Specifications	2	Setting the Number of Rings for Remote Access	9
Overview	3	Setting the Auxiliary Output Relay Time	9
Installation	3	Setting the Number of Times the Alarm Message Plays	9
Sample Applications and Wiring Diagrams	4	Making a Test Call	10
Programming the Voice Dialer	4~10	Operating the Voice Dialer	10~11
Entering Setup Mode	4	Stopping Dialing with the Dialer Keypad	10
Setting and Changing the PIN	5	Remote Control by Telephone	10~11
Setting Alarm Phone Numbers	5	Viewing the Last Event	11
Deleting a Stored Number	6	Resetting the Dialer	11
Recording Alarm Messages	6	Troubleshooting	12
Setting the Auto-Dial Mode	7	Notices, Warnings, and Warranty	12
Setting the Trigger Level	7		
Setting the Trigger Mode	8		

Parts List


1x **Voice Dialer Unit** 2x **Wall-mount screws** 2x **Plastic wall anchors** 1x **User manual**

Specifications

Operating voltage		10~18 VDC
Current draw (max.)	Standby	50mA@12VDC
	Dialing	200mA@12VDC
Phone system		For single-line analog or VOIP phone systems*
Alarm message length (user recorded)		12s site message + 6s individual message for each input
Programmable alarm phone numbers		6
Maximum digits per phone number		14
Programmable dial attempts		Up to 3 times per number
Alarm message repeat		1~2 times for each number
Trigger inputs	1~3	Programmable high (input >3.5V, max. 15V) N.O. or N.C. or low (input <1V) N.O. or N.C.
	Inhibit	Programmable high (input >3.5V, max. 15V) N.O. or N.C. or low (input <1V) N.O. or N.C.
Auxiliary output		2A@24VDC, NO/NC, programmable 1~255s
Operating temperature		32°~140°F (0°~60°C)
Dimensions		4 ¹ / ₁₆ "x5 ⁹ / ₁₆ "x1 ¹¹ / ₁₆ " (104x142x43 mm)
Weight		15.9-oz (450g)

* The E-922CPQ may work with some digital phone systems (single-line or PBX), depending on the system.


Overview

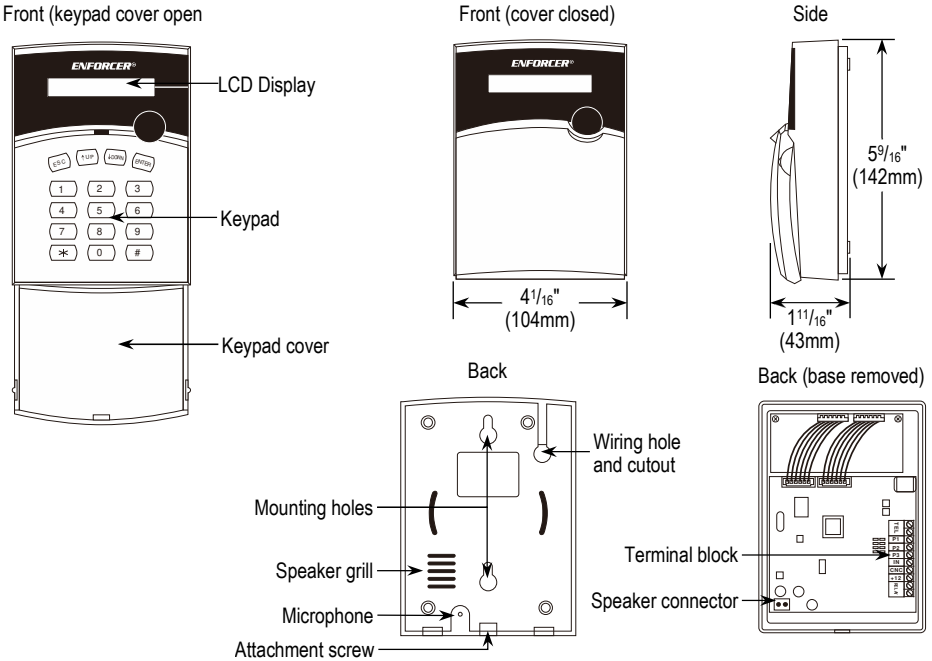

Installation


1. Select a location for the dialer. The dialer should not be exposed to direct sunlight or rain and must not be mounted near heat sources such as radiators, heating ducts, or stoves.
2. Loosen the attachment screw on the lower end of the dialer (see *Overview*, above) and remove the back. For countertop installation, skip to step 4.
3. For wall mount, use the back as a template to mark mounting holes and wiring hole. Drill holes and attach 2 screws into the wall at the desired location. For convenience, 5-6ft (1.5-2m) above the floor is recommended (Fig. 1).
4. Run wires for the telephone connection, for power, from the auxiliary output, and from up to three sensors/contacts or groups of sensors/contacts connected in series referring to the wiring diagram (see *Sample Applications and Wiring Diagrams*, pg. 4). Alternatively, the dialer can be connected to three separate alarm control panel outputs.
5. Thread all wires through the wiring hole, place the back over the heads of the screws installed in step 2 (Fig. 1), and slide down. Tighten or loosen the screws as needed.
6. Connect all wires to the terminal block, again referring to the wiring diagram (see pg. 4) and attach the dialer unit to its back, tightening the attachment screw to hold it firmly into place.

Fig. 1

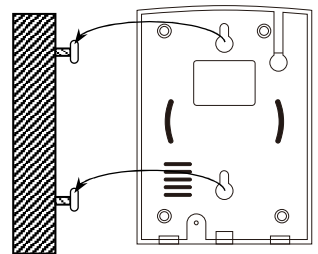


Sample Applications and Wiring Diagrams

Stand-alone installation

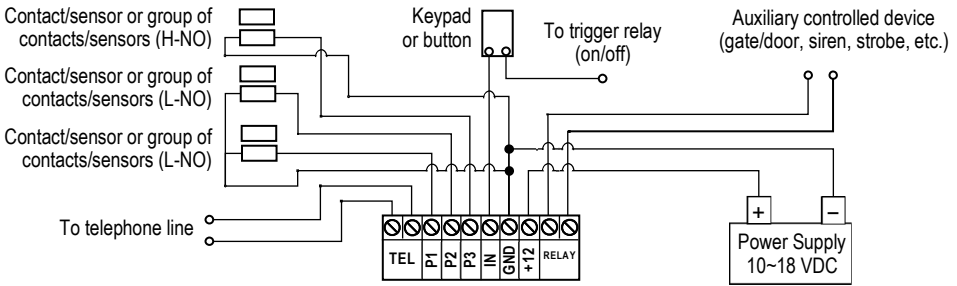

Alarm system installation

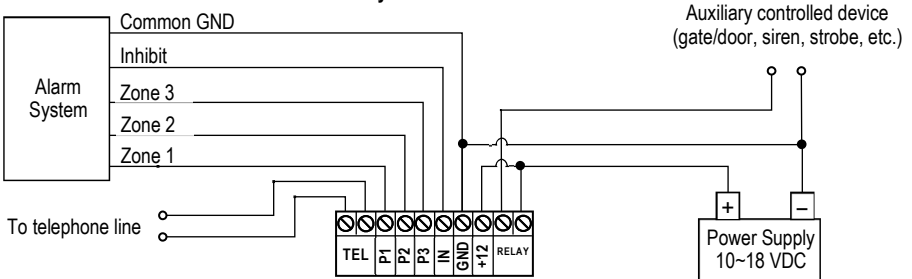

NOTE: If the "Inhibit" input is not used, it should be programmed as low N.C. (L-NC, see Setting the Trigger Level, pg. 7).


Programming the Voice Dialer

You must enter setup mode to program the dialer functions. While in setup mode, if no key is pressed within 20 seconds, the dialer will automatically exit and return to standby mode.

Entering Setup Mode

To enter setup mode:

1. Press the ENTER button.
2. Type in the current PIN (the factory preset PIN is 8888) on the keypad.
3. Press the ENTER button again. You should hear a single beep and the first screen of the setup menu will appear.

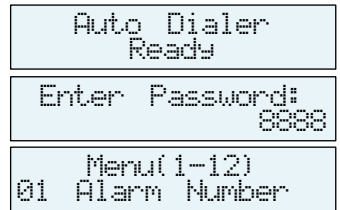

Programming the Voice Dialer (Continued)

Setting and Changing the PIN

In setup mode:

1. Press the DOWN button until you see the "07 Password" on the display or press 07 on the keypad.
2. Press the ENTER button. The current PIN will be shown on the display.
3. Press ENTER again, type in the new PIN (4 digits), and press ENTER.
4. Press the ESC button to return to the settings menu to program other functions.
5. Press the ESC button again to exit the setup mode.

```

Menu(1-12)
07 Password
  
```

```

Password
8888
  
```

```

Enter Password:
1234
  
```

NOTE: If you forget your PIN, you must reset the dialer, deleting all settings and data. Disconnect the power and then power up while holding down the ENTER button until you hear a single long beep. This deletes all settings and data from the dialer (See *Resetting the Dialer*, pg. 11).

Setting Alarm Phone Numbers

You can program up to 6 alarm numbers. In setup mode:

1. If "01 Alarm Number" is not shown on the display, press the UP button until it appears, or press 01 on the keypad.
2. Press the ENTER button. The first alarm number will show on the screen (if already programmed), otherwise "1:" will appear followed by a blank line.
3. Press ENTER to program or overwrite the first number or press the DOWN button to choose the second and following number locations (up to 6 phone numbers) and press ENTER.
4. Type in the number, including the area code if that is required (up to 14 digits).
5. Press the ENTER button to save the number. A single beep will sound.
6. Press the UP or DOWN button to move to another location to enter another number and follow the same procedure.
7. When finished, press the ESC button to return to the settings menu to program other functions.
8. Press the ESC button again to exit the setup mode.

```

Menu(1-12)
01 Alarm Number
  
```

```

Alarm Number
1:
  
```

Programming the Voice Dialer (Continued)

Deleting a Stored Number

From the setup mode:

1. If "01 Alarm Number" is not shown on the display, press the UP button until it appears, or press 01 on the keypad.
2. Press the ENTER button. The first alarm number will show on the screen showing the programmed number.
3. Press ENTER to select that number or press the DOWN button to select another number to be deleted and press ENTER to select.
4. To delete the selected number, press ENTER again.
5. To delete other numbers, press the UP or DOWN button and follow the instructions above.
6. When finished, press the ESC button to return to the settings menu to program other functions.
7. Press the ESC button again to exit the setup mode.

```

Menu(1-12)
01 Alarm Number

```

```

Alarm Number
1:5555551212

```

Recording Alarm Messages

You can record up to four messages. Message 0 (up to 12 seconds) is the site message that will play first. Messages 1~3 (up to 6 seconds each) correspond to each of the three inputs and will follow the site message. To record, rerecord, or playback a message, in the setup mode:

1. Press the UP or DOWN button until you see "02 REC/PLAY" on the display or press 02 on the keypad.
2. Press the ENTER button. You will see "0=site message" on the display.
3. Either press the ENTER button to select that message or select a different message by typing its number (0~3) or pressing the DOWN button to another message location and pressing the ENTER button.
4. Press 0 to record (or rerecord over an existing message) or press 1 to play back an existing message.
5. Immediately after pressing 0 to record, speak clearly into the microphone located at the bottom of the dialer. While recording, a countdown will appear on the display. Recording will automatically stop when the time limit is reached, but you can stop recording at any time by pressing the ENTER button.
6. When recording stops, the dialer will play back your message for review also showing the timer below.
7. Repeat the steps for the other messages.
8. When finished, press the ESC button to return to the settings menu to program other functions.
9. Press the ESC button again to exit the setup mode.

```

Menu(1-12)
02 REC/PLAY

```

```

Select MSG(1-3)
0=site message

```

```

Select MSG(1-3)
1=alarm message

```

```

Select=0
0=REC      1=PLAY

```

```

Recording
  12

```

```

Playing
  2

```

NOTE: You may want to record the important functions in the site message as a reminder. For example, "{Your name}'s security alarm has been activated. Please enter a command, "3" to repeat the message, "4" to listen in, or "0" to stop dialing and return to standby."

Programming the Voice Dialer (Continued)

Setting the Auto-Dial Mode

The dialer can be programmed to dial each programmed number (up to 6) once when triggered, or dial each number in a loop until the dialer is reset. To set the dialing mode, in setup mode:

1. Press the UP or DOWN button until you see "03 Dialing Mode" on the display or press 03 on the keypad.

Menu(1-12)
 03 Dialing Mode
2. Press the ENTER button and press 0 or 1 to make your selection.

Select Mode=1
 0=Single 1=Loop

 - 0 = Single – The dialer will dial Number 1 for the first trigger, Number 2 for the second trigger, and Number 3 for the third trigger.
 - 1 = Loop (default) – The dialer will continuously loop, dialing each number until the alarm is disabled.
3. After making your selection, press ENTER to set.
4. When finished, press the ESC button to return to the settings menu to program other functions.
5. Press the ESC button again to exit the setup mode.

NOTE: With either setting, when you receive the call, you can remotely stop the dialing cycle and return the dialer to standby mode (see *Remote Control by Telephone*, pgs. 10-11).

Setting the Trigger Level

Each of the inputs (IP1, IP2, IP3, INH), can be set to match the type of input device connected. To change the trigger level, in the setup mode:

1. Press the UP or DOWN button until you see "04 Trigger Level" on the display or press 04 on the keypad.

Menu(1-12)
 04 Trigger Level
2. Press the ENTER button. You will see "IP1Trigger Level" on the display for input 1 and its current setting.

IP1Trigger Level
 L-NO
3. Press the DOWN button to select a different input if desired. When the desired input is shown, press the ENTER button to select.
4. Press the number corresponding to your selection.

IP1(0-3)
 L-NO

 - 0 = H-NO – (High N.O.) N.O. input will trigger the dialer when the voltage at the input exceeds 3.5VDC (maximum is 15VDC).
 - 1 = H-NC – (High N.C.) N.C. input will trigger the dialer when the N.C. input is opened and the voltage at the input on standby is greater than 3.5VDC (maximum is 15VDC).
 - 2 = L-NO – (Low N.O.) N.O. input will trigger the dialer when input voltage is less than 1VDC.
 - 3 = L-NC – (Low N.C.) N.C. input will trigger the dialer when the N.C. input is opened and the voltage at the input on standby is less than 1VDC.
5. Press ENTER to set.
6. Press the UP or DOWN button to select another input and repeat the steps above.
7. When finished, press the ESC button to return to the settings menu to program other functions.
8. Press the ESC button again to exit the setup mode.

NOTES:

- If the "Inhibit" input is not being used, it should be left as Low N.C. (L-NC).
- It is recommended that the trigger level and switch be of the same type (N.O. or N.C.).

Programming the Voice Dialer (Continued)

Setting the Trigger Mode

With this setting, you can control how the dialer responds to a trigger even after the trigger has stopped. To set the Trigger mode, in setup mode:

1. Press the UP or DOWN button until you see "05 Trigger Mode" on the display or press 05 on the keypad.
2. Press the ENTER button. You will see the current setting, (default is "1 = Level Trigger") on the display.
3. Type 0 or 1 to select the desired mode (see Fig. 1 below).
 - 0 = Edge Trigger – When a trigger signal is received, the dialer will start the process of dialing alarm numbers as programmed and will follow that process until the alarm is reset either remotely by phone (see *Remote Control by Telephone*, pgs. 10~11) or locally on the keypad (see *Stopping Dialing with the Dialer Keypad*, pg. 10).
 - 1 = Level Trigger –When the triggering signal stops, the dialer will stop dialing, even if it has not finished dialing the first alarm number. This could be useful for any trigger that, if it does not continue, would not be an emergency.
4. Press the ENTER button to set.
5. When finished, press the ESC button to return to the settings menu to program other functions.
6. Press ESC again to exit setup mode.

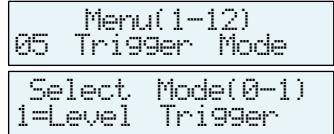


Fig. 1 Interaction between *Trigger Level* and *Trigger Mode* settings

Switch	Trigger Level	Trigger mode	Result
N.O. Switch	L-NO or H-NO	Edge Trigger (Typical)	When the N.O. switch is closed, the dialer dials each number the number of times programmed or until the alarm is reset remotely or on the keypad.
		Level Trigger	When the N.O. switch is triggered, the dialer dials each number the number of times programmed or until the triggering switch is opened again.
	L-NC or H-NC	Edge Trigger	When the N.O. switch is triggered, the dialer dials each number the number of times programmed or until the alarm is reset remotely or on the keypad.
		Level Trigger	When the N.O. switch is triggered, the dialer dials each number the number of times programmed or until the alarm is reset, either remotely or on the keypad, or the triggering switch is opened again.
N.C. Switch	L-NO or H-NO	Edge Trigger	When the N.C. switch is triggered, the dialer dials each number the number of times programmed or until the alarm is reset either remotely or on the keypad.
		Level Trigger	When the N.C. switch is triggered, the dialer dials each number the number of times programmed or until the triggering switch is closed again.
	L-NC or H-NC	Edge Trigger	When the N.C. switch is triggered, the dialer dials each number the number of times programmed or until the alarm is reset either remotely or on the keypad.
		Level Trigger (Typical)	When the N.C. switch is triggered, the dialer dials each number the number of times programmed or until the triggering switch is closed again.

Setting the Dialer "Beep" Volume

The dialer includes audible confirmations and warnings. A single beep confirms an action, and four rapid beeps alerts of an error. To change their volume or silence them, in setup mode:

1. Press UP or DOWN until you see "09 Volume" on the display or press 09 on the keypad.
2. Press the ENTER button. You will see the current setting, on the display.

Programming the Voice Dialer (Continued)

3. Type 0, 1, or 2 to select and the ENTER button to set.

- 0 – Silent
- 1 – Medium (default)
- 2 – Loud

```
Menu(1-12)
09 Volume
```

```
Select(0-2)
Volume=1
```

4. When finished, press the ESC button to return to the settings menu to program other functions.

5. Press the ESC button again to exit the setup mode.

Setting the Number of Rings for Remote Access

This setting controls the number of rings after which the voice dialer will "answer" to allow for remote access by the user. To set the number of rings, in setup mode:

1. Press the UP or DOWN button until you see "10 Ring Times" on the display or press 10 on the keypad.

```
Menu(1-12)
10 Ring Times
```

2. Press the ENTER button. You will see the current setting, on the display (default is 3) showing the number of rings.

```
Select(0-9)
Ring=3
```

3. Type a number between 0 and 9 to select the desired number of rings.

4. Press the ENTER button to set.

5. When finished, press the ESC button to return to the settings menu to program other functions.

6. Press the ESC button again to exit the setup mode.

Setting the Auxiliary Output Relay Time

The dialer has an auxiliary output to trigger an external device such as a gate/door, siren, strobe light, etc. To set the length of time for the trigger (1-255 seconds), in setup mode:

1. Press the UP or DOWN button until you see "11 Relay Time" on the display or press 11 on the keypad.

```
Menu(1-12)
11 Relay Time
```

2. Press the ENTER button. You will see the current setting, on the display.

```
Select(1-255)
Relay Time=10
```

3. Type a number between 1 and 255 to set the auxiliary output relay time (seconds, default is 10).

4. Press the ENTER button to set.

5. When finished, press the ESC button to return to the settings menu to program other functions.

6. Press the ESC button again to exit the setup mode.

Programming the Voice Dialer (Continued)

Setting the Number of Times the Alarm Message Plays

When the dialer is triggered and calls the alarm numbers, it will play back the prerecorded messages either once or twice at each number. To program the number of times, in setup mode:

1. Press the UP or DOWN button until you see "12 Play Times" on the display or press 12 on the keypad.

```
Menu(1-12)
12 Play Times
```

2. Press the ENTER button. You will see the current setting, on the display (default is 1).

```
Select(1-2)
Play Times=1
```

3. Type 1 or 2 to select the number of times to play the message and press the ENTER button.

4. When finished, press the ESC button to return to the settings menu to program other functions.

5. Press the ESC button again to exit the setup mode.

Programming the Voice Dialer (Continued)

Making a Test Call

The dialer can make a test call to ensure that the numbers have been set up correctly. During the call, the speaker allows you to monitor the call's progress. To place a test call, in setup mode:

1. Press the UP or DOWN button until you see "08 Test Number" on the display or press 08 on the keypad.
2. Press the ENTER button. You will see the first of your programmed numbers on the display.
3. Press the UP and DOWN buttons to select the number you want to test dial.
4. Press the ENTER button to select and start the process. Listen in as it completes the call.
5. To interrupt the call, press the ESC button and press the UP and DOWN buttons to select another number you want to test dial.
6. When finished, press the ESC button to return to the settings menu to program other functions.
7. Press the ESC button again to exit the setup mode.

```
Menu(1-12)
08 Test Number
```

```
Test Number
1:5555551212
```

Operating the Voice Dialer

The dialer is always active when powered. If connected to a security system, it will be ready when the system is armed. In stand-alone mode, it can be disarmed by turning off power to the dialer.

Stopping Dialing with the Dialer Keypad

The dialer has no entry delay, so if it is installed in stand-alone mode, when you open the door (assuming your door has a contact installed) or an input is accidentally triggered when you are at the dialer location, it will immediately start dialing. You can stop its dialing and return it to standby mode by pressing the ESC button on the dialer, typing your 4-digit PIN, and pressing ENTER.

Remote Control by Telephone

The system can be remotely controlled and monitored through any touch-tone (DTMF) phone, including mobile phones.

REMOTE CONTROL WHEN THE ALARM IS ACTIVATED

When an alarm has been activated the voice dialer dials the pre-programmed alarm numbers. The receiver will hear the pre-recorded message and may press one of the following function codes within 10 seconds after the message ends to control the system remotely and a second code in 10 seconds for another function. If there is no response within 20 seconds, the dialer will hang up.

Function	Code
Set dialer to play messages only once	1
Set dialer to play messages twice*	2
Repeat the message	3
Start listening in for 30 seconds, press code again to continue listening	4
Stop the dialing process and return the dialer to standby	0
*There will be a 10-second pause after or between each message to allow time to enter a function code.	

Operating the Voice Dialer (Continued)

REMOTE CONTROL BY USER CALL-IN (CALL BACK)

The user can dial in to perform the actions below remotely. To do so:

1. Using a mobile phone or any touch-tone (DTMF) phone, dial the phone number that the voice dialer is connected to. The voice dialer will answer and "beep" once after the number of rings set for remote access (see *Setting the Number of Rings for Remote Access*, pg.9).
2. Enter the PIN Number on the phone's keypad. You will hear a "beep" sound if the correct code has been entered. If a wrong code is entered, the dialer will disconnect automatically, and the user must dial in again. If there is no key entry within 20 seconds, the dialer will hang up.
3. Press one of the following function codes to control the system remotely and press a second code within 10 seconds for another function.

Function	Code
Start listening in for 30 seconds, press code again to continue listening	4
Activate the auxiliary output for the set time	8
Trigger or stop the auxiliary output	9

Viewing the Last Event

To view the last event, in setup mode:

1. Press the UP or DOWN button until you see "06 Last Event" on the display or press 06 on the keypad.
2. Press the ENTER button and the last event will be shown.
The example to the right shows that input 1 was triggered, causing the dialer to dial 555-555-1212.
3. When finished, press the ESC button to return to the settings menu to program other functions.
4. Press the ESC button again to exit the setup mode.

```

Menu(1-12)
06 Last Event

Trigger IP-1
5555551212

```

Resetting the Dialer

Resetting the dialer deletes all settings and data. To reset, disconnect the power and then power up while holding down the ENTER button until you hear a single long beep.

Troubleshooting

Dialer will not dial out	<ul style="list-style-type: none">• Ensure sure that the telephone line is working and is firmly connected to the correct terminal on the dialer.• Make sure that you have programmed at least one telephone number into the unit and that the full number has been stored.
Unit doesn't respond to a call-back	<ul style="list-style-type: none">• Check to see if another unit (fax or answering machine) could be answering the call and remove the other unit.• Adjust the call-in ring detect setting so the dialer will answer.
Difficulty in activating 'listen in' by telephone remote control	<ul style="list-style-type: none">• Try pressing the code key again.• Move to a quieter location as ambient noise may affect the dialer's ability to detect the tone signal.

Notices, Warnings, and Warranty

FCC Part 68

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of the device of this equipment is a label that contains, among other information, a product identifier in the format US:7M7AL01AE922CPQ and REN:0.1A for this equipment.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA.

REN (RINGER EQUIVALENT NUMBERS) STATEMENT

Notice: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

If this equipment US:7M7AL01AE922CPQ causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment product Model: E-922CPQ, for repair or warranty information, please contact SECO-LARM U.S.A., Inc. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this US:7M7AL01AE922CPQ does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

WHEN PROGRAMMING EMERGENCY NUMBERS AND/OR MAKING TEST CALLS TO EMERGENCY NUMBERS:

1. Remain on the line and briefly explain to the dispatcher the reason for the call.
2. Perform such activities in the off-peak hours, such as the early morning or late evening.

NOTE: While the system can provide valuable protection to home and property when properly installed, it cannot guarantee complete protection against intrusion. SECO-LARM is not responsible for any losses or damage which may occur during the use of this product.

IMPORTANT: Users and installers of this product are responsible for ensuring that the installation and configuration of this product complies with all national, state, and local laws and codes. SECO-LARM will not be held responsible for the use of this product in violation of any current laws or codes.

California Proposition 65 Warning: These products may contain chemicals which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

WARRANTY: This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for one (1) year from the date of sale to the original customer. SECO-LARM's obligation is limited to the repair or replacement of any defective part if the unit is returned, transportation prepaid, to SECO-LARM. This Warranty is void if damage is caused by or attributed to acts of God, physical or electrical misuse or abuse, neglect, repair or alteration, improper or abnormal usage, or faulty installation, or if for any other reason SECO-LARM determines that such equipment is not operating properly as a result of causes other than defects in material and workmanship. The sole obligation of SECO-LARM and the purchaser's exclusive remedy, shall be limited to the replacement or repair only, at SECO-LARM's option. In no event shall SECO-LARM be liable for any special, collateral, incidental, or consequential personal or property damage of any kind to the purchaser or anyone else.

NOTICE: The SECO-LARM policy is one of continual development and improvement. For that reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints. All trademarks are the property of SECO-LARM U.S.A., Inc. or their respective owners. Copyright © 2022 SECO-LARM U.S.A., Inc. All rights reserved.

SECO-LARM® U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606
Phone: (949) 261-2999 | (800) 662-0800

Website: www.seco-larm.com
Email: sales@seco-larm.com

