



High Mount Outdoor Detector HX-40/40AM/ 40DAM

WIRED MODEL

HX-40	2 PIRs standard model
HX-40AM	HX-40 with anti-masking
HX-40DAM	HX-40AM with micro-wave


Multilingual instructions

 Visit to the Web site to find
various language versions.

<https://navi.optex.net/manual/08579/>

EN

< FEATURES >

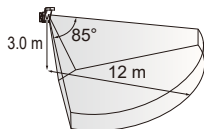

- 3.0 m high mount detection area (12 m)
- Unique pyro element
- Intelligent AND logic
- Dual signal processing logic
- Vegetation sway analysis logic
- Ideal detection area setting
- Digital anti-masking (AM/DAM model only)
- Microwave range selector (DAM model only)

< CONTENTS >

1 INTRODUCTION	2-5 WALL TAMPER (OPTION).....	6
1-1 BEFORE YOUR OPERATION	3 WALK TEST	7
1-2 PARTS IDENTIFICATION	4 SETTING	
1-3 DETECTION AREA	4-1 FUNCTION	8
2 INSTALLATION	5 AREA ADJUSTMENT	10
2-1 MOUNTING WITH THE BRACKET	6 LED INDICATION	10
2-2 ADJUSTING THE VERTICAL ANGLE	7 SPECIFICATIONS	
2-3 MOUNTING WITHOUT THE BRACKET	7-1 SPECIFICATIONS	11
2-4 WIRING	7-2 DIMENSIONS	11

1 INTRODUCTION

1-1 BEFORE YOUR OPERATION

Warning	Failure to follow the instructions provided with this indication and improper handling may cause death or serious injury.
Caution	Failure to follow the instructions provided with this indication and improper handling may cause injury and/or property damage.


The check mark indicates recommendation. The nix sign indicates prohibition.

Warning	Warning	Caution
Do not repair or modify product 	Keep product away from water 	Mount the unit securely


Mounting height. 2.5 to 3.0 m (8.2 to 10 ft.)	Keep the detector parallel to the ground. Parallel Tilt	Consider the direction of the intruder, for the setting of the detection area.
---	---	--

Install the detector in a place where it is free from false alarm factors. For example:


• Sunlight and reflection

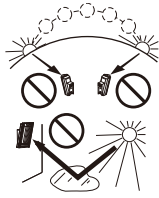

• Heat source

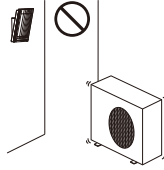


• Objects moving in the wind

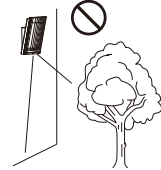

-Precautions for installing two or more sensors

HX-40
HX-40AM
HX-40DAM


Do not install two or more HX-40DAM's units side-by-side or face-to-face. Instead, install them back-to-back. If mounting on the same wall, be sure they are at least 1.0 m (3.3 ft.) apart from each other.

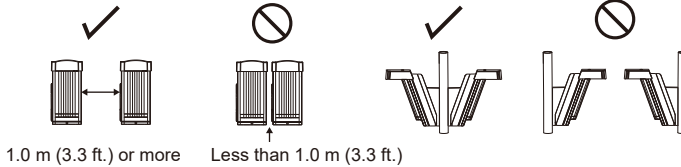

1.0 m (3.3 ft.) or more

Less than 1.0 m (3.3 ft.)

1-2 PARTS IDENTIFICATION

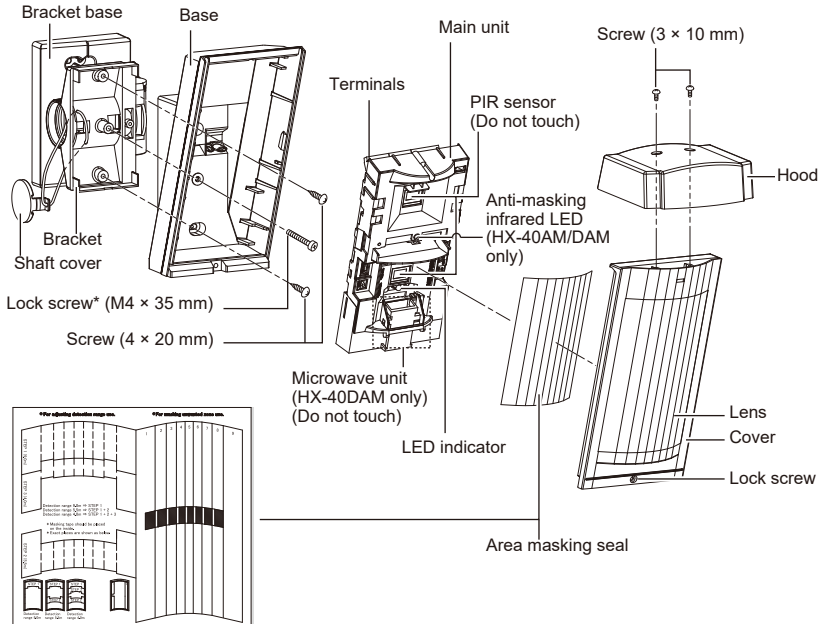


Screw kit


For joint	For wall mounting	For hood
Screw (4 × 20 mm)	Screw (4 × 20 mm)	Screw (3 × 10 mm)

*Lock screw attached on bracket base


Top view

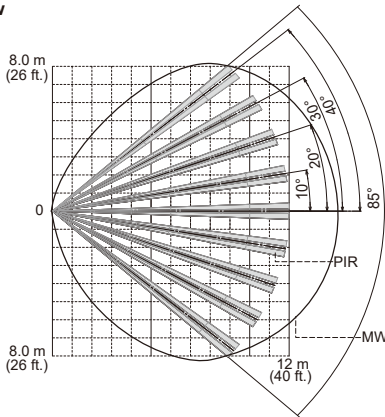

Side view (Mounting height: 3.0 m (10 ft.))



(Mounting height: 2.5 m (8.2 ft.))



- Vertical angle: 1 click (2.5°) upward (Refer to "caution" in 2-2).

2 INSTALLATION



Use the bracket for normal installation. The unit may be mounted directly on the wall, without the bracket, only if the following three conditions are met;

- The mounting height 3.0 m (10 ft.).
- Horizontal direction adjustment is unnecessary.
- The ground is level.


2-1 MOUNTING WITH THE BRACKET

Using the bracket makes it possible to adjust the unit horizontally by $\pm 90^\circ$.


In cases where the ground is uneven and/or not parallel with the base of the unit, it is possible to adjust the unit vertically by $\pm 20^\circ$.

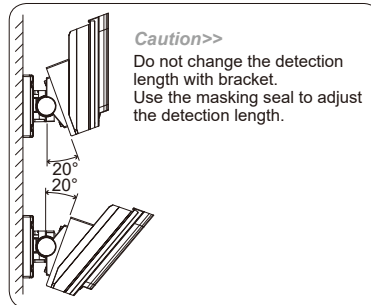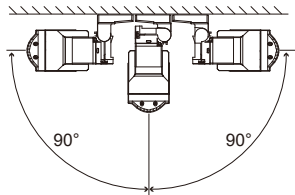


- 1 Remove the Up-Down lock screw.

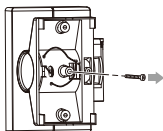

- 2 Push the shaft cover clip outwards to remove the shaft cover.

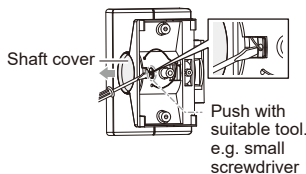


- 3 Loosen the adjustment screw two turns.

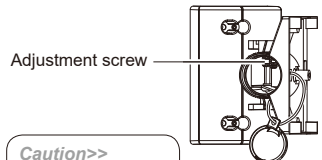


Caution>>
Do not loosen the screw too much. It may disassemble.

- 4 Tilt the bracket about 45° and pass through the wire.

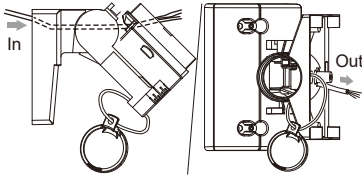


- 6 Open the wiring knockout.

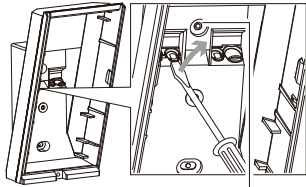


Wiring knockout

- 5 Determine the horizontal direction (left or right) of the detector before installing the bracket on the wall.

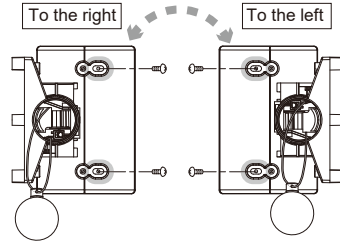


- 7 Open the Up-Down lock screw knockout for connecting the bracket.

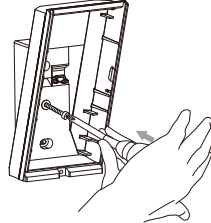


Knockout with 4 × 20 tapping screw (screwkit)


- 8 Tighten screws ① and ②, adjust the bracket angle (refer to 2-2), then tighten screw ③. Perform an area check. If re-adjustment is required, loosen screw 3 and change the bracket angle. After the adjustment is complete, tighten screw 3 again.

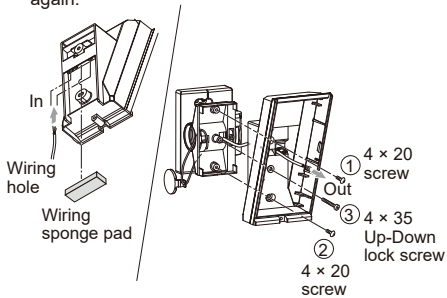

- 9 Tighten the adjustment screw clockwise.

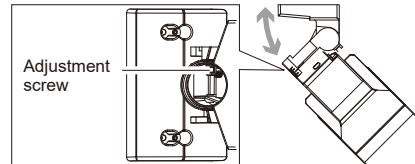

- 10 Wire to the terminal and install the main unit and lens on the base.

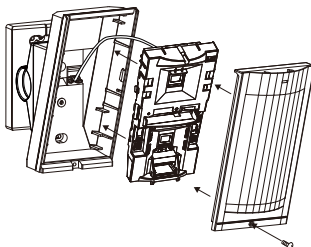


- 11 Install the shaft cover into place.

2.2 ADJUSTING THE VERTICAL ANGLE



For best performance, install detector parallel to the ground.
Decide the detection length. If you choose 9.0 m/5.5 m/4.0 m, mask the unnecessary lens with masking seals.

Perform the walk test to check if detector is parallel to the ground.

If the detection length is shorter than the designated one (refer to page 3), change the detector angle upward.



If the detection length is longer than the designated one (refer to page 3), change the detector angle downward.

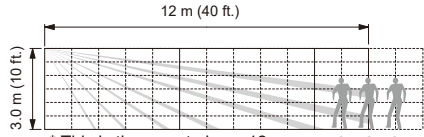

* This is the case to have 12 m detection length.

If the detection length is equal to the designated one, adjustments have been completed.

Caution>>


If the base of the unit is already parallel to the ground,

- Do not change the detection length by tilting the unit up or down. Detection length should be adjusted with masking seal. Refer to 2-1 for the details.

Example (the ground is level)


0° is the right setting for 3.0 m (10 ft.) height installation.

Adjust 1 click (2.5° upward) for 2.5 m (8.2 ft.) height installation.

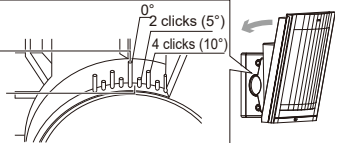


2.3 MOUNTING WITHOUT THE BRACKET


- 1 Open the wiring knockout with suitable tool e.g. screwdriver.

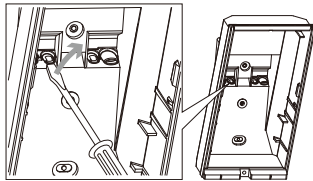


- 2 Pull the wire through the base knockout.

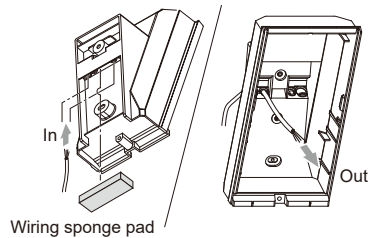

- 3 Fasten the base to the wall.

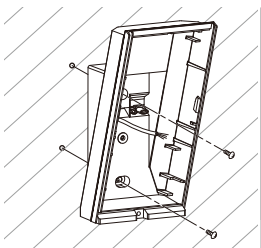

- 4 Install main unit after wiring to the terminal.

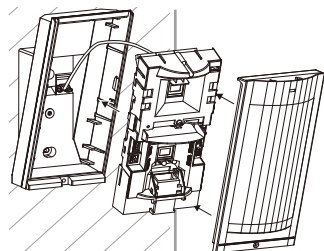


2-4 WIRING

Power wires should not exceed the following lengths.

Unit: m (ft.)

WIRE GAUGE	HX-40		HX-40AM		HX-40DAM	
	12 V	14 V	12 V	14 V	12 V	14 V
AWG22 (0.33 mm ²)	160 (520)	360 (1180)	140 (460)	310 (1020)	120 (390)	250 (820)
AWG20 (0.52 mm ²)	260 (850)	560 (1840)	230 (750)	490 (1610)	180 (590)	390 (1,280)
AWG18 (0.83 mm ²)	410 (1350)	900 (2950)	360 (1180)	780 (2560)	290 (950)	630 (2,070)

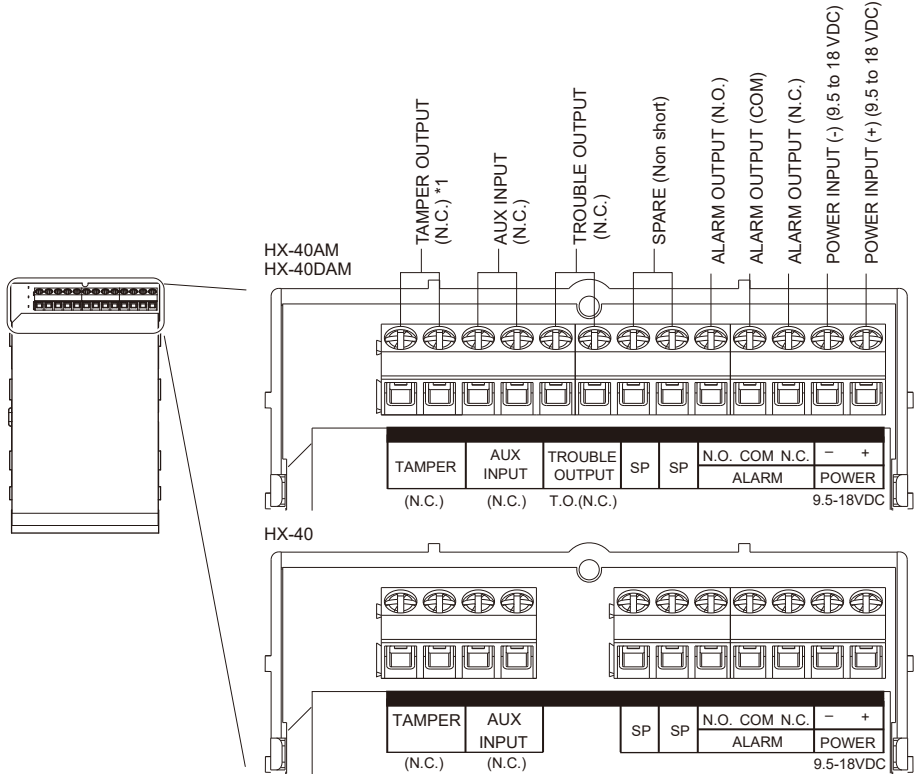

*1: TAMPER terminals to be connected to a 24 hour supervisory loop.

2-5 WALL TAMPER (OPTION)


Universal magnet switch may be mounted as a wall tamper.

Installation space for universal magnet switch is provided on the back of the main unit and the bracket.


Maximum size of an applicable universal magnet switch: D 9 x W 40 x H 9 mm (D 0.35 x W 1.57 x H 0.35 inches)

Universal magnet switch on the market assist is not included.

Main unit


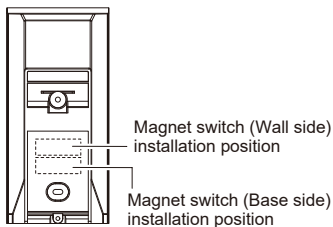


Bracket

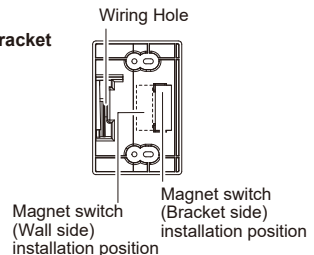


-Installation

- 1 Install the universal magnet switch (wall side) to the wall. To determine the install position, use the "Install position template" provided on the inside cover of the product package.
- 2 Open the wiring knockout with suitable tool e.g. screwdriver.

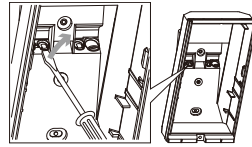


- 3 Install the other portion of the universal magnet switch to the back of the main unit or the bracket. Pull the wiring through the knockouts.

When not using the bracket

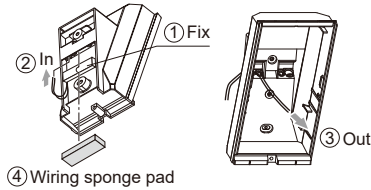




When using the bracket

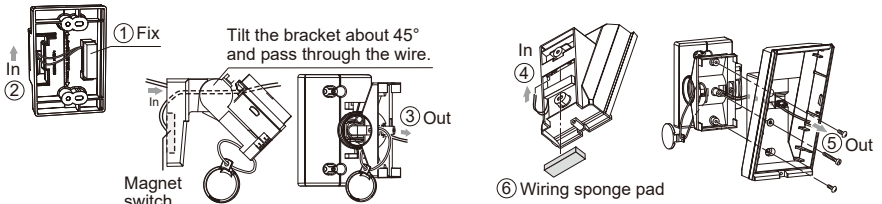

- 4 Install the bracket and the main unit to the wall surface.
- 5 Connect the universal magnet switch wiring to the tamper terminal of the main unit.

3 WALK TEST

- 1 Set the DIP switch 1 (LED ON/OFF) to "ON".
- 2 Check that the detector detects an object in the intended detection area. The installation has been successful if the LED lights for two seconds after a person walks into the detection area.
- 3 If the LED indication is not required at all times, set the DIP switch 1 (LED ON/ OFF) to "OFF".

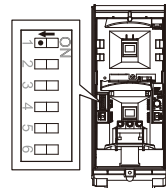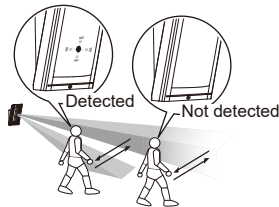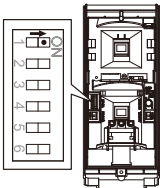

Note>>


The switch is set "ON" by factory default.

Note>>

- For the walk test, move more than 1.0 m (3.3 ft.) away from the detector.
- Conduct a walk test at least once a year.

4 SETTING

4-1 FUNCTION

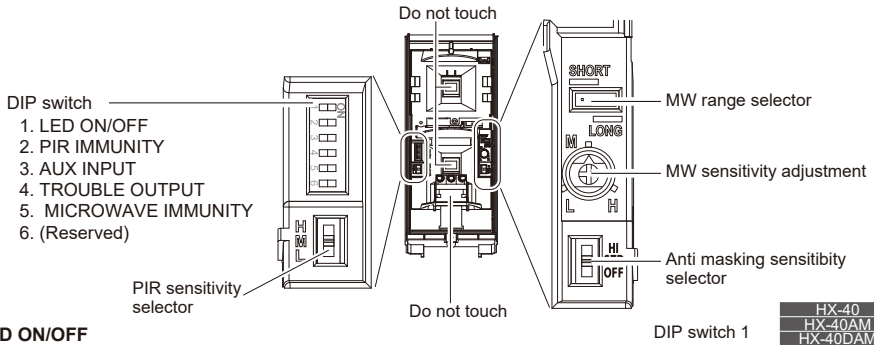

-LED ON/OFF



POSITION	FUNCTION
ON (Factory default)	The LED lights when someone is detected.
OFF	The LED does not light even if someone is detected.

-PIR IMMUNITY



POSITION	FUNCTION
STD (Factory default)	PIR IMMUNITY logic is not activated.
IMMUNITY	PIR IMMUNITY logic is activated. Use this under harsh environment (e.g. small animal).

-AUX INPUT



POSITION	FUNCTION
AND (Factory default)	When both the main unit and the satellite detect someone, the alarm is output. Set to this when not connecting a satellite unit.
OR	When either the main unit or the satellite detects someone, the alarm is output.

Notes>>

- The alarm does not output unless both the main unit and the satellite detect someone within 60 sec.
- If the OR mode is selected without a satellite unit connected, the alarm is generated continuously.

-TROUBLE OUTPUT



POSITION	FUNCTION
ON (Factory default)	Anti-masking signal is output from TROUBLE OUTPUT terminal.
OFF	Anti-masking signal is output from both TROUBLE and ALARM OUTPUT terminal.

Notes>>

Use this when not wiring a detected trouble input terminal on the control panel.

-MICROWAVE IMMUNITY

DIP switch 5

HX-40
HX-40AM
HX-40DAM



POSITION	FUNCTION
STD (Factory default)	MICRO WAVE IMMUNITY logic is not activated.
IMMUNITY	MICRO WAVE IMMUNITY logic is activated. Use this under harsh environment (e.g. vegetation sway).

RANGE SELECTOR/
SENSITIVITY
ADJUSTMENT

HX-40
HX-40AM
HX-40DAM


-MW RANGE SELECTOR/MW SENSITIVITY ADJUSTMENT

PIR AREA SETTING	DETECTION AREA (SIDE VIEW)	MW RANGE SELECTOR	MW SENSITIVITY ADJUSTMENT
12 m (40 ft.) Factory default		LONG 	MID
9.0 m (30 ft.) 		SHORT 	HIGH
5.5 m (18 ft.) 		SHORT 	MID
4.0 m (13 ft.) 		SHORT 	LOW

-PIR SENSITIVITY

PIR SENSITIVITY SELECTOR

HX-40
HX-40AM
HX-40DAM

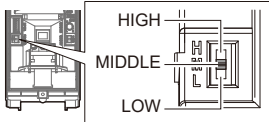


POSITION	FUNCTION
HIGH	High sensitivity
MIDDLE (Factory default)	Middle sensitivity
LOW	Low sensitivity

-ANTI-MASKING SENSITIVITY

ANTI-MASKING SENSITIVITY SELECTOR

HX-40
HX-40AM
HX-40DAM

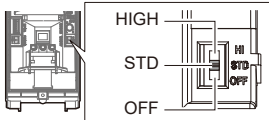

POSITION	FUNCTION
HIGH	High sensitivity
STD (Factory default)	Standard sensitivity
OFF	Disabled


Caution>>

When closing the cover, do not leave any object within 1.0 m (3.3 ft.) from the unit.


5 AREA ADJUSTMENT

-DETECTION LENGTH ADJUSTMENT


To limit the detection length, apply the appropriate masking seal. Note that there are three different types of seal.

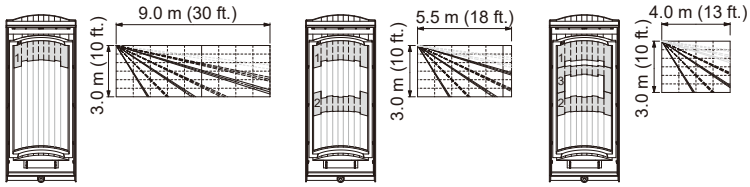

-AREA MASKING

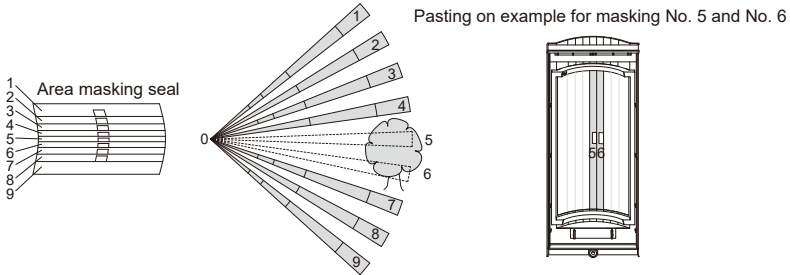

6 LED INDICATION

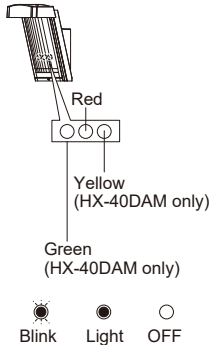

-HX-40/40AM

DETECTOR CONDITION		LED INDICATOR (RED ONLY)
Warm-up		→ Blinks for approx. 60 sec.
Alarm		→ Lights for 2 sec.
Trouble output	Anti-Masking booting (Anti-Masking start up)	→ → → Blinks 2 times and goes off for 5 sec. and then repeats for 180 sec.
	Masking detection	→ → → Blinks 3 times and goes off for 3 sec. and then repeats.

-HX-40DAM

DETECTOR CONDITION		LED INDICATOR
Warm-up		→ Blinks for approx. 60 sec.
Alarm		→ Red lights for 2 sec.
PIR detection		→ Green lights for 2 sec.
MW detection		→ Yellow lights for 2 sec.
Trouble output	Anti-Masking booting (Anti-Masking start up)	→ → → Green and Red blink 2 times simultaneously and go off for 5 sec. This sequence is repeated for 180 sec.
	Masking detection	→ → → Green and Red blink 3 times simultaneously and go off for 3 sec. This sequence is repeated.


7 SPECIFICATIONS

7-1 SPECIFICATIONS

Model	HX-40	HX-40AM	HX-40DAM
Detection method	Passive infrared		Passive infrared & Microwave
PIR Coverage	12 m (40 ft.) 85° wide / 94 zones		
PIR distance limit	4.0 m, 5.5 m, 9.0 m (13 ft., 18 ft., 30 ft.)		
Detectable speed	0.3 m/s to 1.5 m/s (1 ft./s to 5 ft./s)		
Sensitivity	2.0°C (3.6°F) at 0.6 m/s		
Power input	9.5 to 18 VDC		
Current draw	35 mA (max.) at 12 VDC	40 mA (max.) at 12 VDC	50 mA (max.) at 12 VDC
Alarm period	2.0 ±1 sec.		
Warm-up period	Approx. 60 sec. (LED blinks)		
Alarm output	Form C 28 VDC 0.2 A (max.)		
Tamper output	N.C. 28 VDC, 0.1 A (max.) N.C. open when cover removed.		
Trouble output	–	N.C. 28 VDC, 0.1 A (max.)	
Aux input	N.C. 28 VDC, 0.1 A (max.)		
LED indicator	Red: Warm-up, Alarm	Red: Warm-up, Alarm, Trouble	Red: Warm-up, Alarm, Trouble Green: Warm-up, PIR detect, Trouble Yellow: Warm-up, MW detect
Operating temperature	-20°C to +60°C (-4°F to +140°F)		
Environment humidity	95% max.		
Weatherproof	IP55		
Mounting	Wall		
Mounting height	2.5 to 3.0 m (8.2 to 10 ft.)		
Bracket adjust angle	Vertical: ±20° Horizontal: ±95°		
Weight	600 g (21.2 oz.)		700 g (24.7 oz.)
Accessories	Bracket, Hood, Area masking seal, Screw (3 × 10 mm) × 2, Screw (4 × 20 mm) × 4		

* Specifications and designs are subject to change without prior notice.

7-2 DIMENSIONS

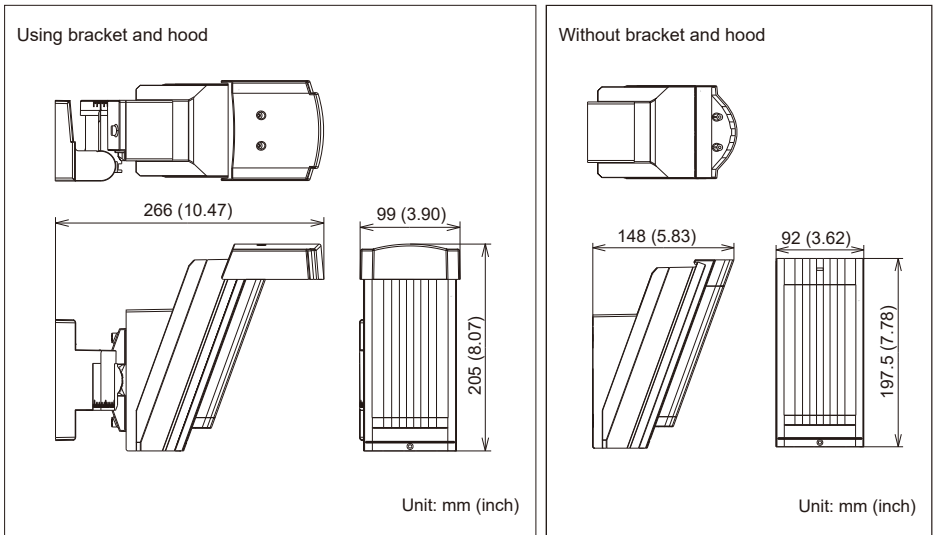

NOTE

Hereby, OPTEX declares that the radio equipment type HX-40DAM(C), HX-40DAM(SP) and HX-DAM(F) are in compliance with RED 2014/53/EU. The full text of the EU DoC is available at the following internet address;

EU DoC ➡ www.optex.net

Microwave emission Frequency and Power

HX-40DAM(C), HX-40DAM(SP) : 10.525GHz 13.8 mW e.i.r.p
HX-40DAM(F) : 10.587GHz 19.54 mW e.i.r.p

The following list indicates the areas of intended use of the equipment and any known restrictions. For countries not included in this list, please consult the responsible Spectrum Management Agency.

10.525 GHz : Belgium, Denmark, Greece, Italy, Luxembourg, The Netherlands, Spain,
Sweden, Iceland, Norway, Switzerland

10.587 GHz : Belgium, France, Ireland, Luxembourg, The Netherlands, United Kingdom

Optex HX-40DAM shall be supplied by a SELV and LPS (or UL1310 class 2) power supply or connected to a dedicated control unit with SELV and LPS output.

FCC ID : DC9 OPMW IC : 4012A-OPMW

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The HX-40 series is only a part of a complete system, therefore we cannot accept complete responsibility for any damages or other consequences resulting from an intrusion.

■ EU & UK contact information



<https://navi.optex.net/cert/contact/>



OPTEX CO., LTD. (JAPAN)
www.optex.net

OPTEX INC./AMERICAS HQ (U.S.)
www.optexamerica.com

OPTEX SECURITY SAS (France)
www.optex-europe.com/fr

OPTEX KOREA CO.,LTD. (Korea)
www.optexkorea.com

OPTEX (EUROPE) LTD./EMEA HQ (U.K.)
www.optex-europe.com

OPTEX SECURITY Sp.z o.o. (Poland)
www.optex-europe.com/pl

**OPTEX (DONGGUAN) CO.,LTD.
SHANGHAI OFFICE (China)**
www.optexchina.com

**OPTEX SECURITY B.V.
(The Netherlands)**
www.optex-europe.com/nl

**OPTEX PINNACLE INDIA,
PVT., LTD. (India)**
www.optexpinnacle.com

OPTEX (Thailand) CO., LTD. (Thailand)
www.optex.co.th

Copyright (C) 2008-2022 OPTEX CO.,LTD.